



JOHN DEERE

# Product Services Information

## INSTALLATION INSTRUCTIONS

(Includes English, French, German, Spanish and Italian)



JOHN DEERE

and retain cam.

### LATCH KIT

#### Parts in Kit

Qty.	Description
1	Handle, Locking (Includes Key)

**NOTE:** Retain these installation instructions with the machine operator's manual.


#### Parking Safely

1. Stop vehicle on a level surface, not on a slope.
2. Lock park brake.
3. Stop engine.
4. Remove key.
5. Before you leave the operator's seat, wait for engine and all moving parts to stop.
6. Disconnect the negative battery cable or remove the spark plug wire (for gasoline engines) before servicing the machine.

#### Remove Latch


1. Open glove box door.

**NOTE:** Grasp wing knob driver while removing screw to keep wing knob driver from falling.

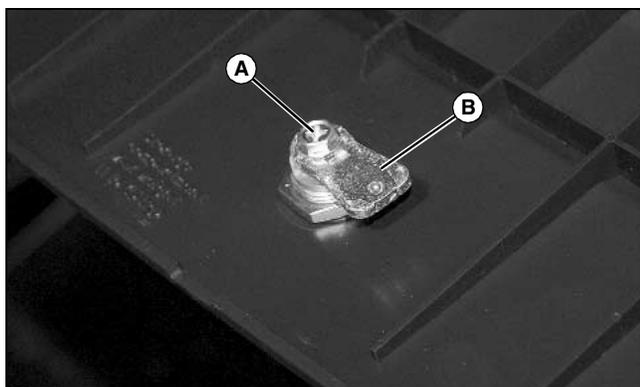


MX50026

2. Remove screw (A) holding cam (B) to latch. Remove

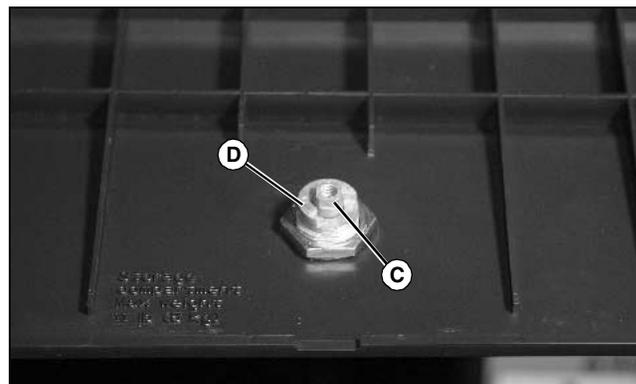

MX50032

3. Pull wing knob driver (C) out from housing (D).

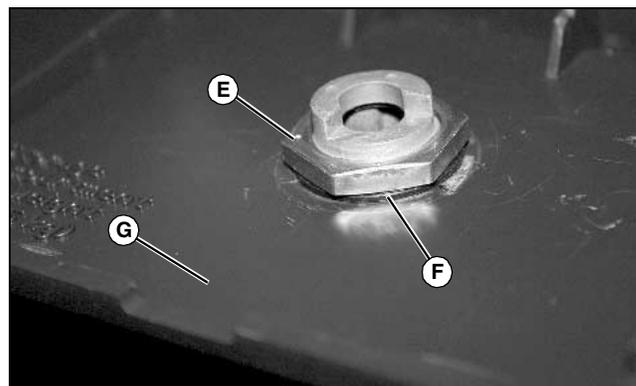


MX50027

4. Remove nut (E) and sealing washer (F). Support door (G) with one hand and push housing out from inside.


#### Install Latch

1. Remove screw from latch assembly and remove wing knob driver.

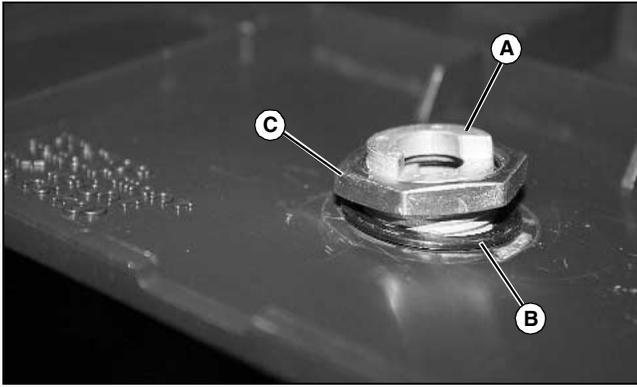


MX50028

2. Install housing (A), sealing washer (B), and nut (C) as shown.

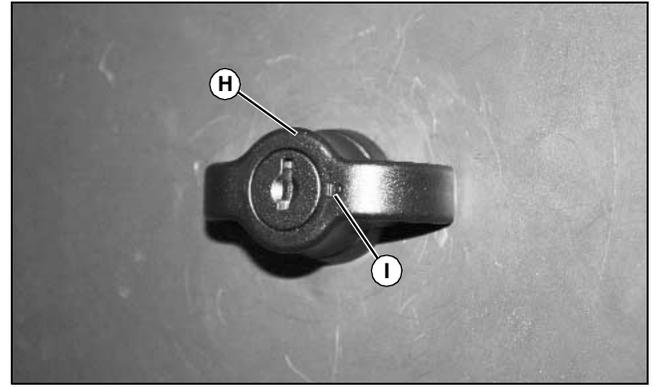

MX50031


5. Close door and rotate wing knob driver (H) counter-clockwise to lock. Wing knob driver should be in the horizontal position with symbol (I) to the right.

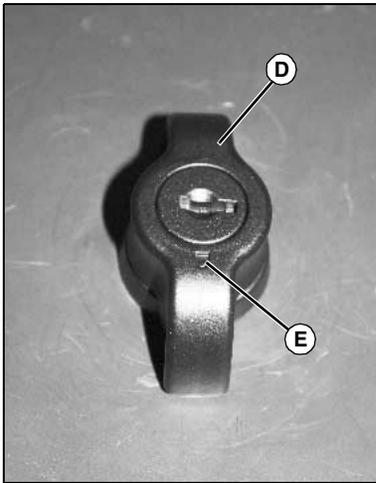

MX50029

3. Insert wing knob driver (D) into housing in the vertical position with symbol (E) facing down.

**NOTE: Grasp wing knob driver while tightening screw to keep wing knob driver from falling and cam from turning.**

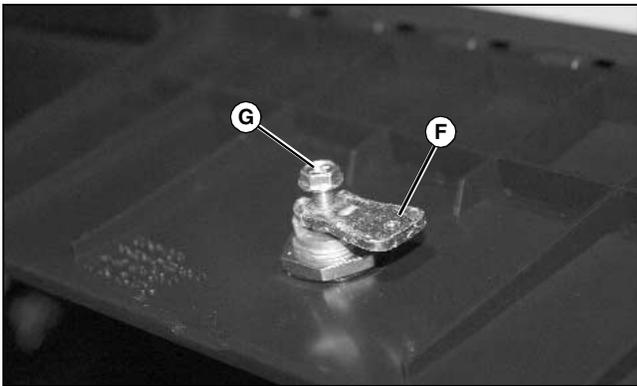

MX50030

4. Install cam (F) with screw (G) as shown.