

Windshield Wiper Kit

BM26389



JOHN DEERE

INSTALLATION INSTRUCTIONS

Windshield Wiper Kit

M177610 31MAR20 (ENGLISH)

**XUV835E, XUV835M, XUV865E, XUV865M Gator™
Utility Vehicle**

**John Deere Horicon Works
M177610 (31MAR20)**

PRINTED IN U.S.A.
COPYRIGHT © 2020
DEERE & COMPANY
Moline, Illinois

All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2016

M177610-19-31MAR20

Parts in Kit


Quantity	Description
1	Wiper Motor Assembly (with cover)
1	Wiper Arm Assembly
1	Wiper Blade

NOTE: Retain these installation instructions with your machine operator's manual.

BVVMSIT,00001FE -19-23MAR20-1/1

Hardware in Kit

Item	Description	Part Number	Quantity
A	Hexagonal flanged nut	14M7298	1
B	Cap	UC14350	1
C	Hexagonal nut	UC14353	2
D	Flat Washer	UC14347	2
E	Flat Washer	UC14348	2
F	Hexagonal Domed Cap Nut	UC14352	1
G	Washer	UC14345	2
H	Flat Washer	UC14346	2
I	Hexagonal Nut	14M7273	1

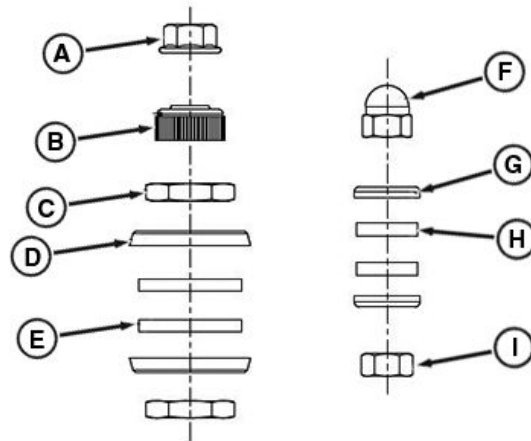

APY18559—UN—16MAY19

SR99263,0000141 -19-22MAY19-1/1

Parking Safely

Park the machine safely. See Parking Safely in your Operator's Manual.


MX88017,0000007 -19-17OCT19-1/1

Install Kit

1. Install washer (A), and seal (B).
2. Install washer (C), and seal (D).

A—Washer
B—Seal

C—Washer
D—Seal

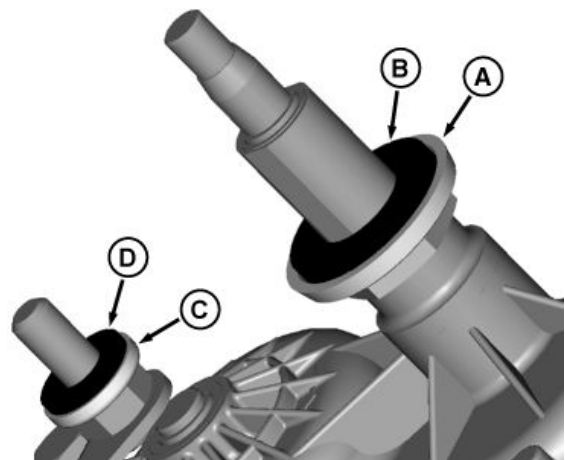


MXTO19396—UN—05OCT16

Continued on next page


BVVMSIT,00001FF -19-23MAR20-1/8

3. Position wiper assembly (A) through the windshield.

A—Wiper Assembly

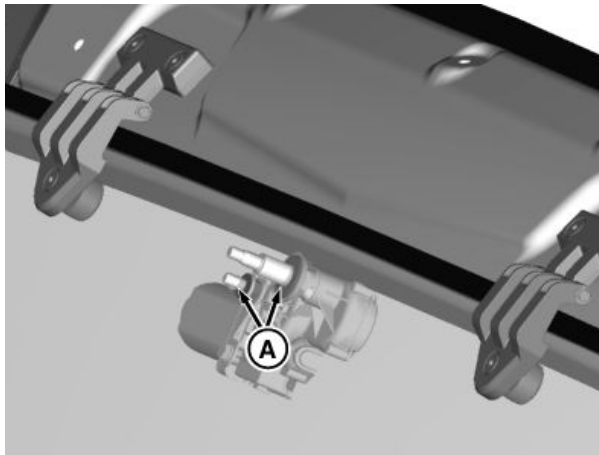

MXT019397—UN—03OCT16

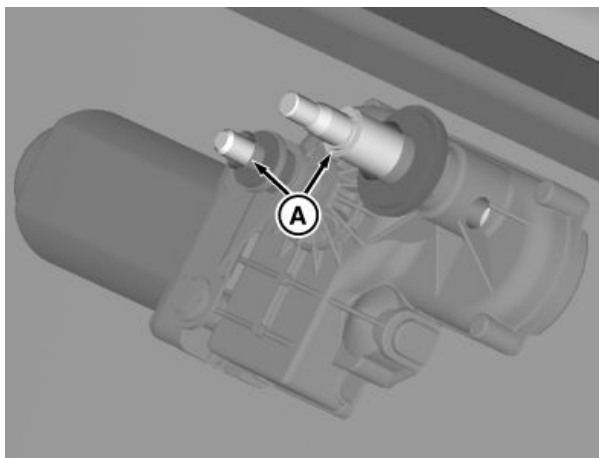


MXT019398—UN—03OCT16

BVMSIT,00001FF -19-23MAR20-2/8

4. Install seal (A), washer (B), nut (C), and shaft skirt (D).
5. Install bushing (E), seal (F), washer (G), and acorn nut (H).

A—Seal
B—Washer
C—Nut
D—Shaft Skirt

E—Bushing
F—Seal
G—Washer
H—Nut, Acorn

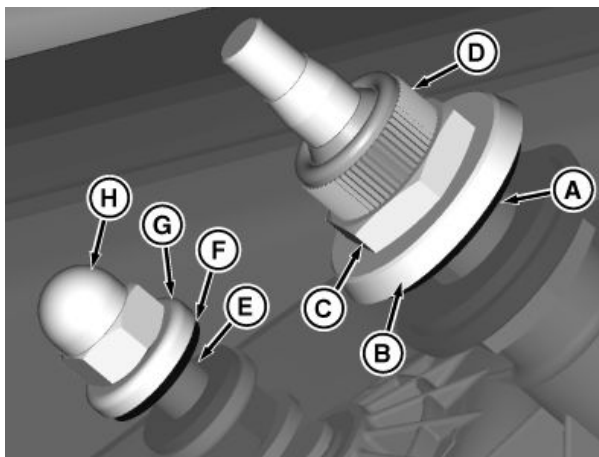

MXT019399—UN—03OCT16


Continued on next page

BVMSIT,00001FF -19-23MAR20-3/8

6. Install wiper arm assembly, washer (A), and nut (B).
7. Install wiper blade.

A—Washer

B—Nut

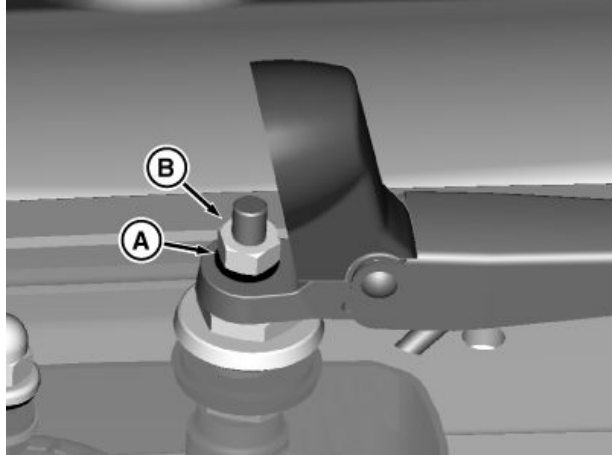


MXT019400—UN—03OCT16

BVVMSIT,00001FF -19-23MAR20-4/8

8. Connect wiring harness (A).
9. Install cover (B).

A—Wiring Harness

B—Cover

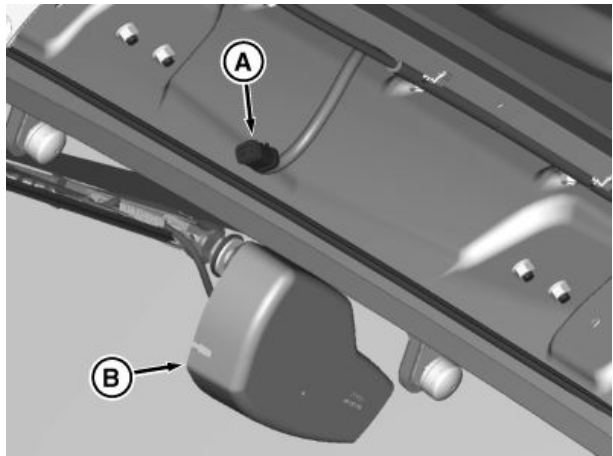


MXT019401—UN—06OCT16

BVVMSIT,00001FF -19-23MAR20-5/8

10. To aid in locating the correct switch connector, remove center bezel (A).
11. Remove hole plug (B).

A—Center Bezel

B—Hole Plug

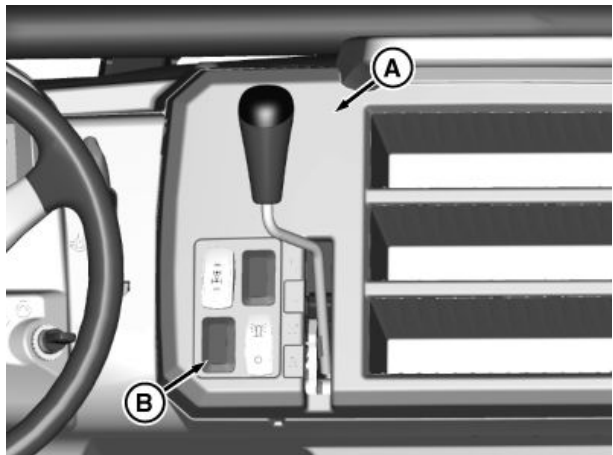

MXT019393—UN—03OCT16


Continued on next page

BVVMSIT,00001FF -19-23MAR20-6/8

NOTE: The wiring harness has a label with a wiper symbol near the wiper switch connector.

12. Locate switch connector (A) from main machine harness and feed through opening in the center bezel (B).
13. Plug switch into connector.

A—Switch Connector B—Center Bezel

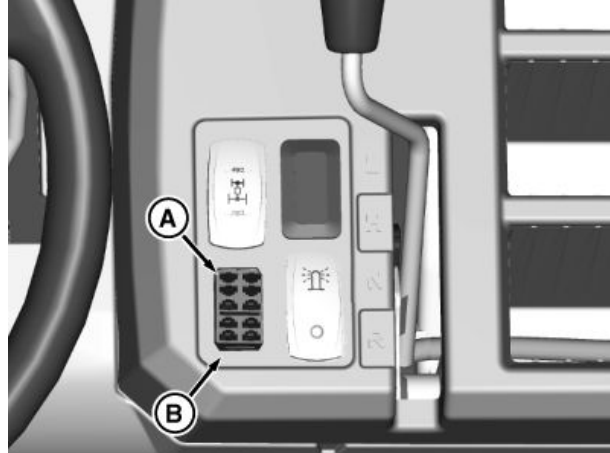


MXT019394 —UN—03OCT16

BVMSIT,00001FF -19-23MAR20-7/8

14. Feed connector back through hole and snap switch (A) into hole.
15. Install center bezel.

A—Wiper Switch

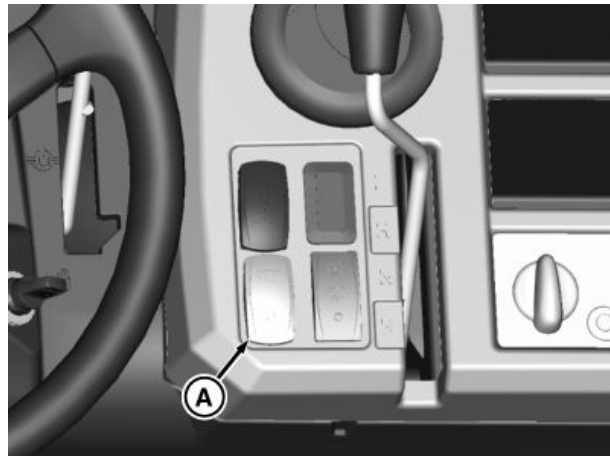

MXT019395 —UN—03OCT16

BVMSIT,00001FF -19-23MAR20-8/8

