



JOHN DEERE

# Product Services Information

## INSTALLATION INSTRUCTIONS

(Includes English, French, German, Spanish and Italian)



JOHN DEERE

### Install Light


### BEACON LIGHT KIT

#### Parts in Kit


Qty.	Description
1	Beacon Light
1	Plug
1	Bracket, Left Beacon Light
1	Ground Screw, M5x8
1	Wiring Harness, w/Socket Outlet
1	Switch
1	Tie Strap
2	Capscrew, M8x25

#### Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Disengage PTO and stop attachments.
3. Lower attachments to the ground.
4. Lock park brake.
5. Stop engine.
6. Remove key.
7. Wait for engine and all moving parts to stop before you leave the operator's station.
8. Close fuel shut-off valve, if your machine is equipped.
9. Disconnect the negative (-) battery cable before servicing the machine.

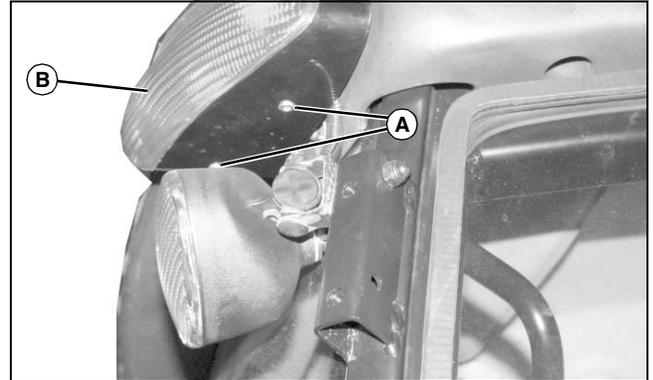


MX35972

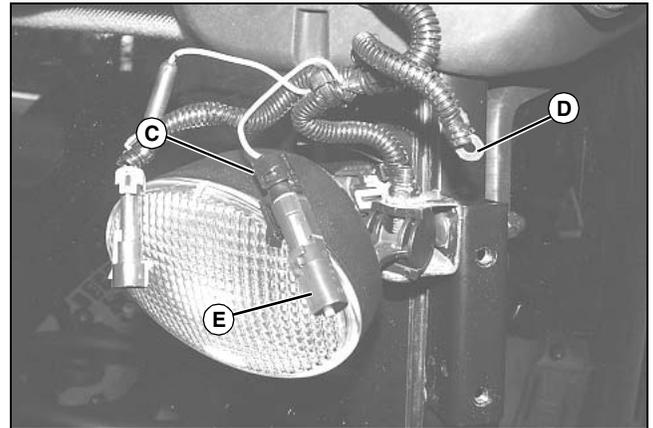

MX35973


1. Remove two screws (A), and remove amber light (B) to locate the orange wire #163 lead (C) and black wire lead (D), with eyelet, at the front left corner of the cab roof.
2. Remove female connector (E) from the orange wire #163 lead (C), and install connector on wire on beacon light wiring harness.

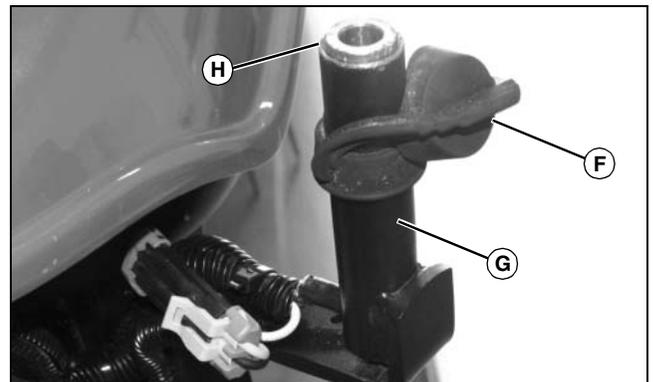

MX35974

3. Install plug (F) on beacon light bracket (G).


4. Install the wiring harness, with socket outlet (H), with the orange wire inside the barrel of the beacon light bracket (G), and pull out the bottom. Tighten wiring harness outlet securely onto top of light bracket.

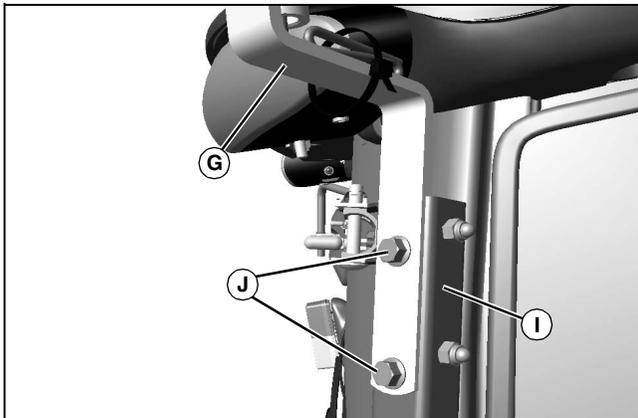

MX35975

5. Install the beacon light bracket (G) into the tractor bracket (I). Secure with two M8x25 capscrews (J).
6. Install the male connector of the orange wire #163 from the cab harness to the female connector on the beacon orange wire lead.
7. Connect the eyelet on black wire lead to the small hole at the base of the beacon bracket using M5x8 ground screw.


**NOTE: When operating tractor without beacon light installed in bracket, insert plug (F) into opening on top of beacon bracket to prevent corrosion.**

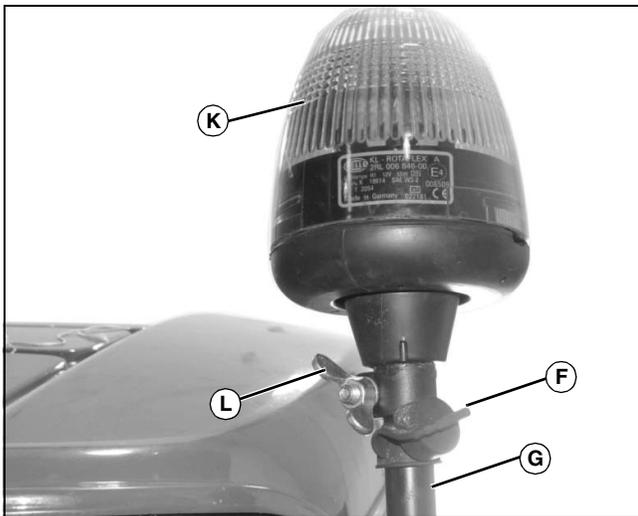

MX35976

8. Push top of plug (F) aside and install beacon light (K) by pushing down into beacon bracket (G) until fully seated.
9. Secure light by tightening thumb screw (L).
10. Raise remaining wiring harnesses and connectors into base of amber light, and install amber light.
11. Secure remaining exposed beacon wiring harness onto beacon bracket with tie strap.

## Install Switch

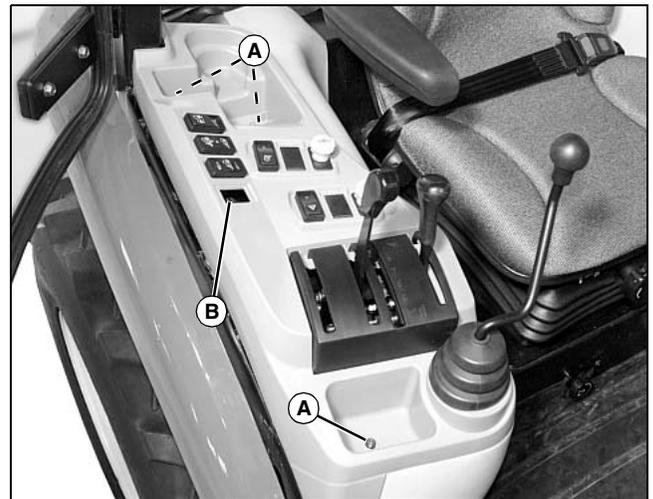

MX35915

1. Remove three capscrews (A) securing right console and lift the console upwards enough to access the beacon light switch connector on the tractor harness.
2. Remove plastic switch cover (B) on console.
3. Install the beacon switch and install the harness connector to the switch.
4. Test installation.
5. Install right console and secure with three capscrews.