



JOHN DEERE

# Product Services Information

## INSTALLATION INSTRUCTIONS


(Includes English, French, German, Spanish and Italian)



JOHN DEERE

### WINDSCREEN KIT

#### Parts in Kit

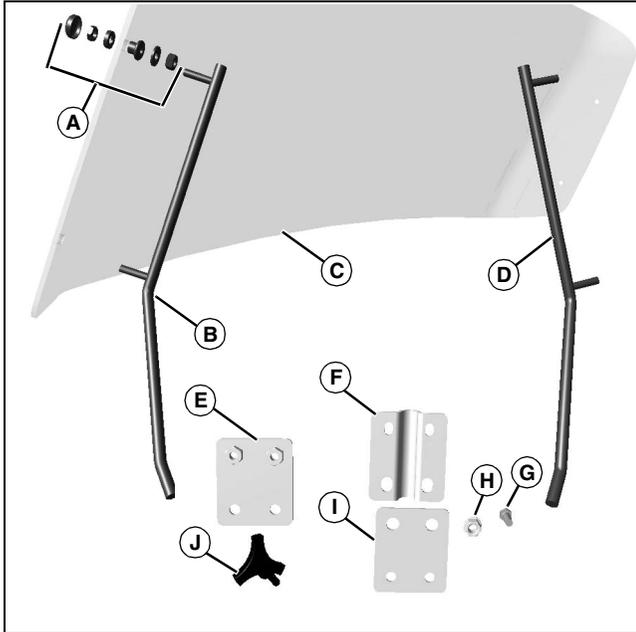

MX31065A, MX32559

Qty.	Description
1	Hardware Kit, Windscreen (A)
1	Support, Left Windscreen (B)
1	Windscreen (C)
1	Support, Right Windscreen (D)
2	Plate, Welded Mounting (E)
2	Plate, Windscreen Mount (F)
2	Bolt, (5/16 x 1 in.) (G)
2	Nut, Nylon Insert Flange (5/16 in.) (H)
2	Plate, Backing (I)
2	Knob (J)

**NOTE: Retain these installation instructions with your machine operator's manual.**


#### Parking Safely

1. Stop vehicle on a level surface, not on a slope.
2. Lock park brake.
3. Stop engine.
4. Remove key.
5. Before you leave the operator's seat, wait for engine and all moving parts to stop.
6. Disconnect the negative battery cable or remove the spark plug wire (for gasoline engines) before servicing the machine.

#### Installing the Windscreen

1. Under each of the storage bin areas, locate the dimples at the back of each storage bin. Use the dimples for drilled hole locations.


**NOTE: The bottom-drilled holes on the passenger and driver's side will be towards the center of the vehicle.**

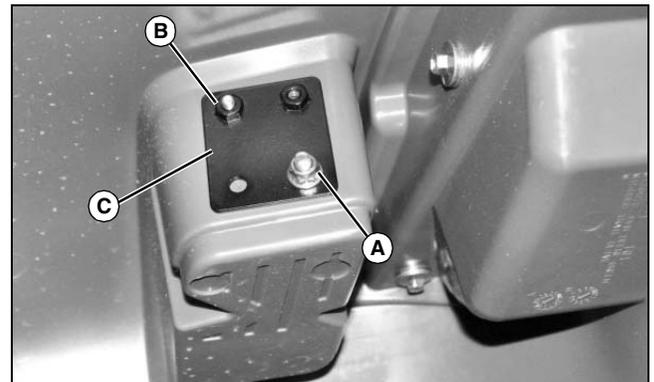

MX32557

#### Picture Note: Passenger side shown


2. Drill two 9 mm (3/8 in.) holes on each side of the vehicle.
  - a. The bottom-drilled hole (A) is closest to the center of the vehicle.
  - b. The top hole (B) will be diagonal to the bottom hole.
3. Hold welded mounting plate (C) in position as shown.

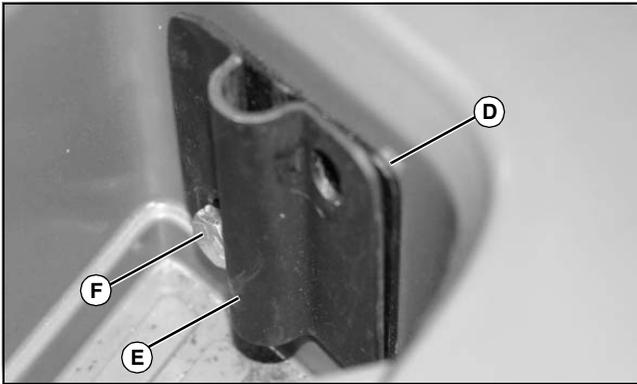

MX32562

4. Install the backing plate (D) inside the storage bin.
5. Install the windscreen mounting plate (E).
6. Install 5/16 x 1 in. bolt (F) in the lower hole closest to center of vehicle, through mounting plate, backing plate, wall of the storage bin, and the mounting plate on the underside of the vehicle.
7. Attach bolt with 5/16 in. flange nut from the underside of vehicle. Do not tighten nut at this time.
8. Repeat mounting plate installation on the driver's side of the vehicle.

## Assemble Windscreen

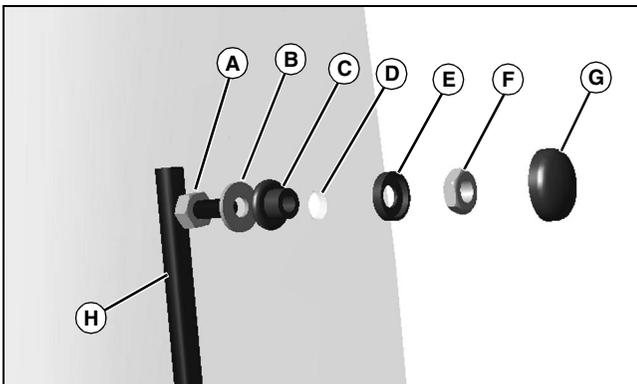

MX31072

**Picture Note: Left (driver's) side upper windscreen mount shown.**

1. Install the retaining nut (A) fully onto each stud.
2. Install a washer (B) on each stud.

**NOTE: The windscreen supports (H) are different for the left (driver's) and right (passenger's) sides.**

**The rubber grommets (C) are installed into each windscreen hole (D) at the factory. If grommet is removed or falls out, install in windscreen before installing support.**

3. From the inside of the windscreen, install the supports to the windscreen with long end of supports to the bottom of the windscreen, pressing studs with washers and nuts


through the rubber grommets (C).

4. Install a clear plastic retainer (E) onto each stud on outside of windscreen. The cupped side of the retainer is away from the windscreen.

**NOTE: Windscreen will be loose on the supports at this time. Do not tighten the windscreen to the supports until instructed to do so.**


5. Install locknut (F) onto each stud until top of nut is flush with end of stud.
6. Press a black plastic cap (G) over each nut (F) and onto clear plastic retainer (E).

**IMPORTANT: Avoid damage! Do not over tighten the windscreen-retaining nut. Over tightening may damage the rubber grommets or break the windscreen.**

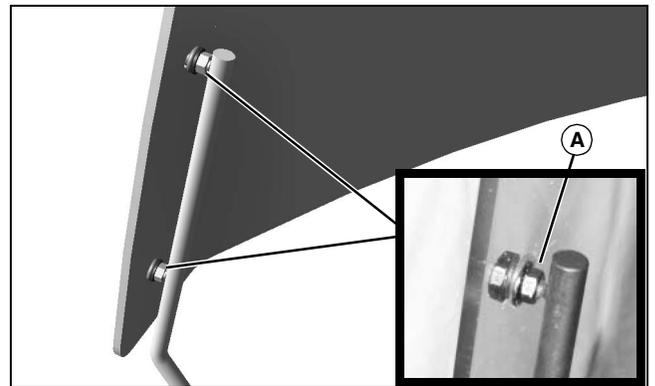

MX31074

7. Secure the supports to the windscreen by tightening the inside retaining nuts (A) on each stud.

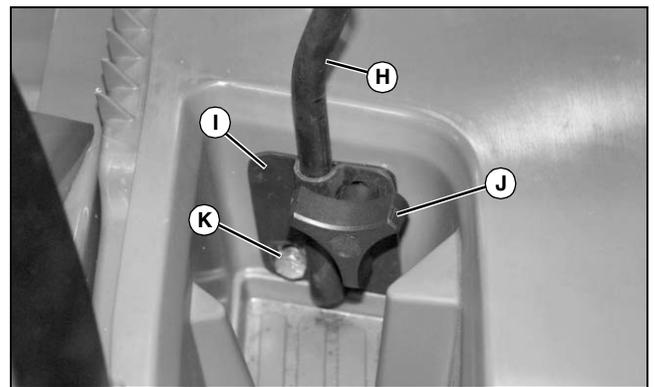

MX32560

8. Lift the windscreen, and support assembly (H) into place over the machine, and insert the supports into the mounting plates (I) on both sides.
9. Install an adjustment knob (J) onto each mounting plate and tighten firmly.
10. Tighten 5/16 in. flange nut and 5/16 x 1 in. bolt (K) on both sides of vehicle.