

Rear Bumper Kit

BM22767



JOHN DEERE

INSTALLATION INSTRUCTIONS

Rear Bumper Kit

M159601 05JUN20 (ENGLISH)

TE, TH, TX, TX Turf, XUV625i, XUV825E, XUV825i, XUV825i S4, XUV825M, XUV825M S4, XUV835E, XUV835M, XUV835R, XUV855D, XUV855D S4, XUV855E, XUV855M, XUV855M S4, XUV865E, XUV865M, and XUV865R Gator™ Utility Vehicles

John Deere Horicon Works
M159601 (05JUN20)

PRINTED IN U.S.A.
COPYRIGHT © 2020
DEERE & COMPANY
Moline, Illinois


All rights reserved.
A John Deere ILLUSTRATION™ Manual

M159601-19-05JUN20

Parts in Kit

Quantity	Description
1	Rear Bumper (A)
2	Plug (B)
4	Bolt (C)
4	Nut (D)

NOTE: Retain these installation instructions with your machine operator's manual.

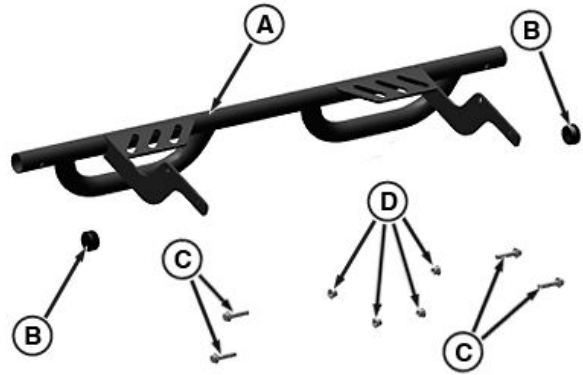

APY35090 —UN—07MAY20

BVMSIT,00002EC -19-07MAY20-1/1

Parking Safely

Park the machine safely. See Parking Safely in your Operator's Manual.

MX88017,0000007 -19-17OCT19-1/1

Install Rear Bumper

1. Install plugs (A) in both side ends of the bumper (B).
2. Install bumper on the underside of the cargo box with bolts (C) and nuts (D).
3. Tighten the bolts (C) to a specification.


Specification

Bolt—Torque.....63 N·m
(46.5 lb·ft)

4. Repeat on the other side.

A— Plug (2 used)
B— Bumper

C— Bolt (4 used)
D— Nut (4 used)

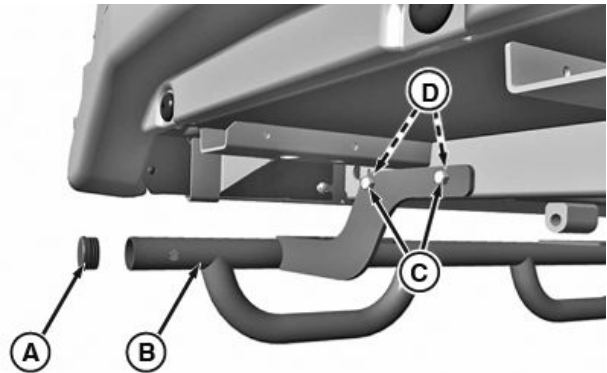

APY35091 —UN—07MAY20

BVMSIT,00002ED -19-08MAY20-1/1

