



JOHN DEERE

Product Services Information

INSTALLATION INSTRUCTIONS

(Includes English, French, German, Spanish and Italian)



JOHN DEERE

HORN KIT

Grease

NOTE: A suitable dielectric grease must be applied when installing this kit. You can purchase MPG2 grease from your local John Deere dealer.

Parts in Kit

Qty.	Description
1	Horn Assembly
1	Switch
1	Cover, Switch


NOTE: Retain these instructions with your machine operator's manual.

Parking Safely

1. Stop vehicle on a level surface, not on a slope.
2. Lock park brake.
3. Stop engine.
4. Remove key.
5. Before you leave the operator's seat, wait for engine and all moving parts to stop.
6. Disconnect the negative battery cable or remove the spark plug wire (for gasoline engines) before servicing the machine.

Install Horn Assembly


1. Raise hood.

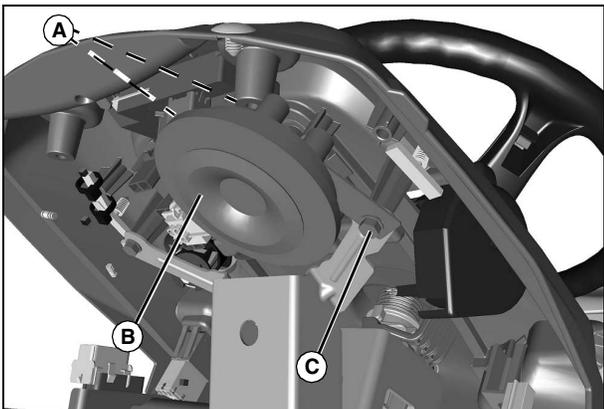

MX43267


2. Connect yellow/pink wiring harness connectors to connectors (A) on horn assembly (B).
3. Remove bolt (C), and install horn assembly. Secure with bolt just removed.

NOTE: Be certain that when making mark for hole, it is approximately 12 mm (15/32 in.) away from tilt steering wheel lever (G) (if equipped) so it does not interfere with it's use.

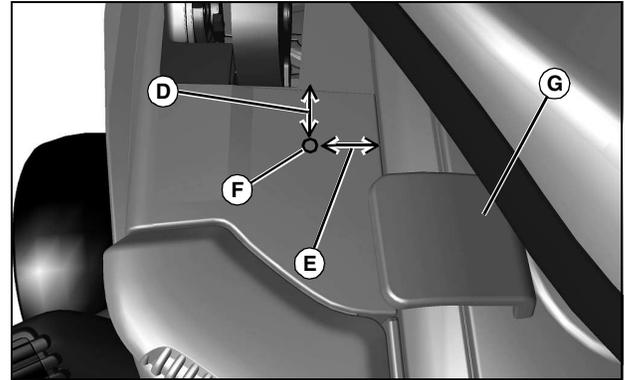

MX43268


4. Measure 22 mm (7/8 in.) (D) downward, and 22 mm (7/8 in.) (E) inward, and make a drill mark (F).
5. Drill a 16 mm (5/8 in.) hole in dash at drill mark.

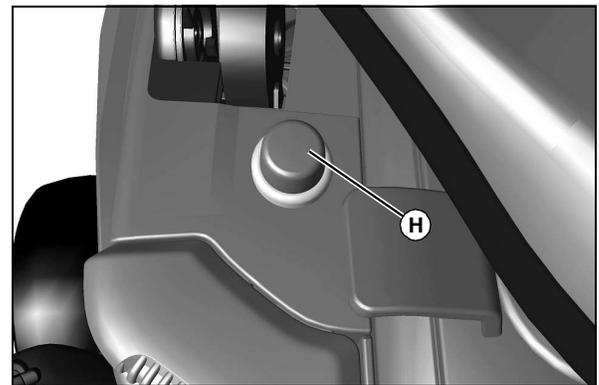

MX43269

6. Install switch from bottom upward, and install switch cover (H) over switch.

NOTE: Wiring harness connecting to switch is found under dash.

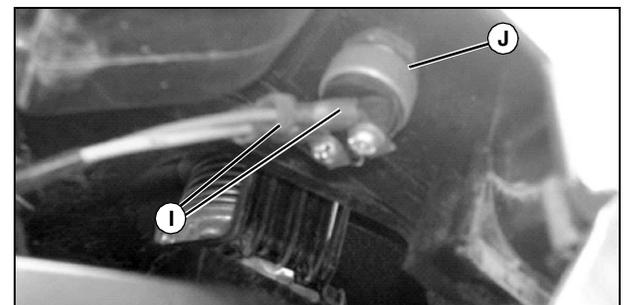

MX43270

7. Connect yellow/pink wiring harness connectors (I) to horn assembly (J).
8. Connect negative (-) battery terminal.