



JOHN DEERE

# Product Services Information

## INSTALLATION INSTRUCTIONS

(Includes English, French, German, Spanish and Italian)



JOHN DEERE

**NOTE:** Flanged side of rear screen is the rear of the screen.

### OPS REAR SCREEN KIT

#### Parts in Kit

Qty.	Description
1	Rear Screen
4	Clamp, Cam Locking
2	Headrest
8	Screw, M6x16


**NOTE:** Retain these installation instructions with the machine operator's manual.

#### Parking Safely

1. Stop vehicle on a level surface, not on a slope.
2. Lock park brake.
3. Stop engine.
4. Remove key.
5. Before you leave the operator's seat, wait for engine and all moving parts to stop.
6. Disconnect the negative battery cable or remove the spark plug wire (for gasoline engines) before servicing the machine.


#### Install Kit

1. Park machine safely. (See Parking Safely.)

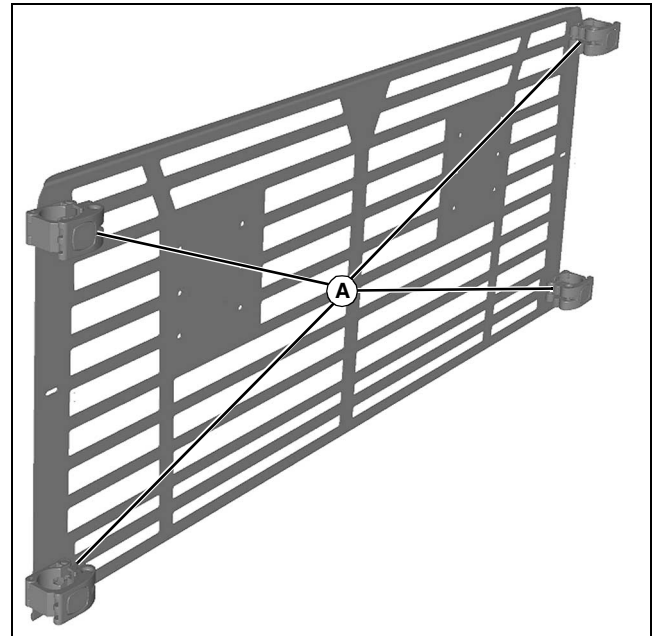


MX49057

2. Loosely install four locking clamps (A) to front of screen with four screws.

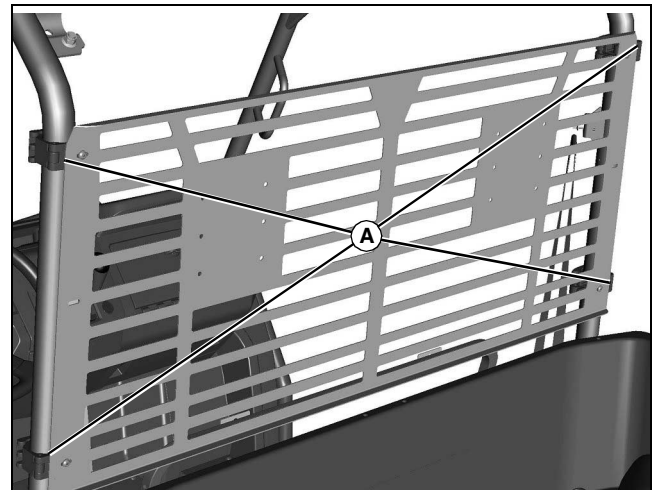

MX49058

3. Open locking clamps (A), attach to rear of OPS and close locking clamps.
4. Tighten four clamp screws securely.

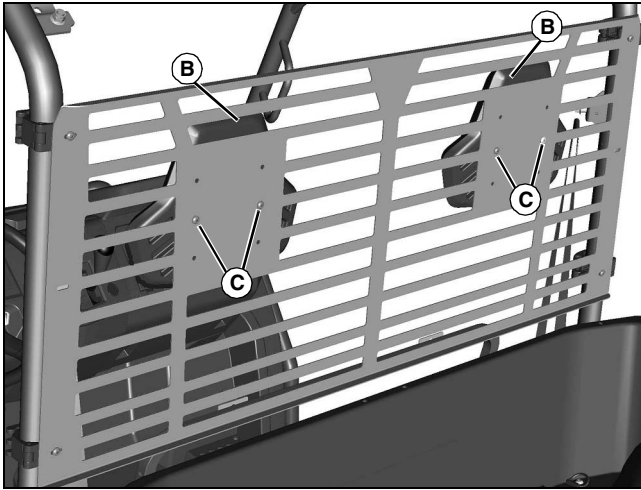

MX48883

5. Install each headrest (B) to front of screen with two screws (C).