

Footrest Kit

BUC10864



JOHN DEERE

INSTALLATION INSTRUCTIONS

Footrest Kit

UC22710 07JAN19 (ENGLISH)

Z810A, Z820A, Z830A, Z840A, Z850A, Z860A, Z915E,
Z915B, Z920M, Z925M, Z930M, Z945M, Z950M, Z955M,
Z960M, Z965M, Z930R, Z950R, Z955R, Z965R, Z970R,
Z994R Mid-Duty ZTrak™

John Deere Turf Care
UC22710 (07JAN19)

PRINTED IN U.S.A.
COPYRIGHT © 2019
DEERE & COMPANY
Moline, Illinois


All rights reserved.
A John Deere ILLUSTRATION™ Manual

UC22710-19-07JAN19

Parts in Kit

Quantity	Description
2	Footrest (A)
2	Washer, M9 (B)
2	Nut, Flange, M8 (C)
2	Bolt, Hex Head, M8x60 (D)

NOTE: Retain these installation instructions with the machine operator's manual.

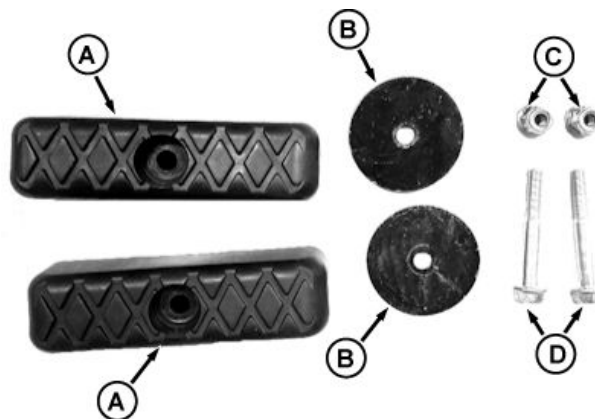

TC100255—UN—14JAN19

MX00654.0000310 -19-14JAN19-1/1

Parking Safely

1. Stop machine on a level surface, not on a slope.
2. Disengage mower blades or any other attachments.
3. Lower attachments to the ground.
4. Lock the park brake.
5. Stop the engine.
6. Remove the key.
7. Wait for engine and all moving parts to stop before you leave the operator's seat.
8. Close fuel shut-off valve, if your machine is equipped.
9. Disconnect the negative battery cable or remove the spark plug wire(s) (for gasoline engines) before servicing the machine.

OOU1023.0000035 -19-21FEB13-1/1

Install Footrests

NOTE: Face of foot rest is angled for comfort and is marked with a line to aid in getting both footrests oriented the same. Marks can either be both up or down depending on preference.


1. Orient footrest to desired angle for comfort.
2. Place footrest (A) in desired opening of toe board. Avoid interference with foot brake or lift deck pedal.
3. Install bolts (B), washers and locknuts (C). Tighten to:

Specification	
Foot Rest Bolt—Torque.....	20 N·m 15 lb·ft

4. Repeat for the other footrest.

A—Footrest
B—Bolt, Hex Head, M8

C—Washer, M9 and Nut,
Flange, M8

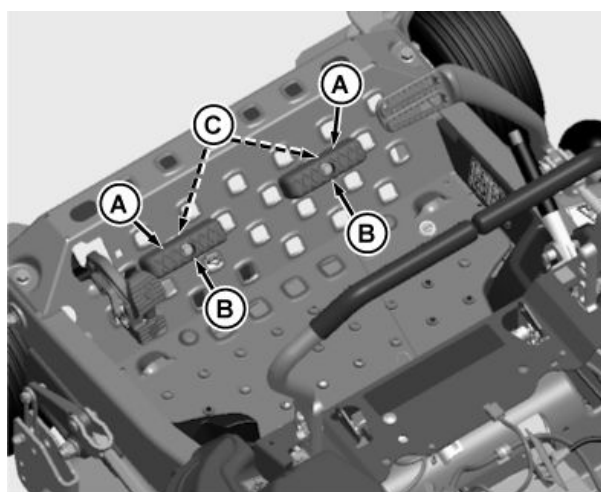

TC100256—UN—14JAN19

MX00654.0000311 -19-14JAN19-1/1

